

PA-987 887 2

SMOKE DETECTION PANEL XL No.5 SCHEDULE 'B' (DUAL ADDRESS INPUTS)										
INPUT			OUTPUT				REMARKS			
ADDRESS No. 1	ADDRESS No. 2	INITIATING DEVICES	RESULTING ADDRESS	ANNUNCIATOR MESSAGES	ACTIVATED RELAYS	ACTIVATED HVAC EQUIPMENT				
051103	051104	POX-31-131 INTERFACE MODULE TRX-2R-5-7	051130	SOL VALVE DUMP 41 SOUTH TWR I	SPX-17-054 GROUP A	DELUGE SOL. VALVE ACS-41-15 GROUP A				
051105	051106				SPX-15-031 GROUP A	DELUGE SOL. VALVE ACS-41-4 GROUP A				
051105	051107									
051108	051109				SPX-16-041 GROUP A	DELUGE SOL. VALVE ACS-41-8 GROUP A				
051110	051111				SPX-17-051 GROUP A	DELUGE SOL. VALVE ACS-41-12 GROUP A				
051201	051202				SPX-14-023 GROUP A	DELUGE SOL. VALVE ACS-41-3 GROUP A				
051201	051203									
051204	051205				SPX-16-044 GROUP A	DELUGE SOL. VALVE ACS-41-11 GROUP A				
051206	051207				SPX-15-034 GROUP A	DELUGE SOL. VALVE ACS-41-7 GROUP A				
051208	051209				SPX-17-053 GROUP A	DELUGE SOL. VALVE ACS-41-14 GROUP A				
051210	051211				SPX-18-061 GROUP A	DELUGE SOL. VALVE ACS-41-16 GROUP A				
051210	051212									
									POX-25-073 POX-25-074 POX-26-081 POX-26-082 POX-26-083 POX-26-084 POX-19-014 POX-20-021 POX-20-024 POX-21-031 POX-21-034 POX-22-041 POX-22-043 POX-22-044 POX-23-051	RETURN AIR FAN ACR-41-7 SHUTDOWN RETURN AIR FAN ACR-41-8 RETURN AIR FAN ACR-41-9 RETURN AIR FAN ACR-41-10 RETURN AIR FAN ACR-41-11 RETURN AIR FAN ACR-41-12 SUPPLY FAN ACS-41-3 SUPPLY FAN ACS-41-4 SUPPLY FAN ACS-41-7 SUPPLY FAN ACS-41-8 SUPPLY FAN ACS-41-11 SUPPLY FAN ACS-41-12 SUPPLY FAN ACS-41-14 SUPPLY FAN ACS-41-15 SUPPLY FAN ACS-41-16

SMOKE DETECTION PANEL XL No.5 SCHEDULE 'B'					
INPUT			OUTPUT		
ADDRESS No. 1	ADDRESS No. 2	INITIATING DEVICES	RESULTING ADDRESS	ANNUNCIATOR MESSAGES	REMARKS
051301	051302	POX-31-132 INTERFACE MODULE TRX-2R-5-8	051330	SOL VALVE DUMP 41 NORTH TWR I	
051303	051304				
051305	051306				
051307	051308				
051307	051309				
051401	051402				
051403	051404				
051405	051406				
051405	051407				
		GROUP B			